


TRANSITION ALTITUDE
10000

APP	118.000
-----	---------

NIK 5V
LASTI 5F
KOFER 1D

TIVAT
RWY 14

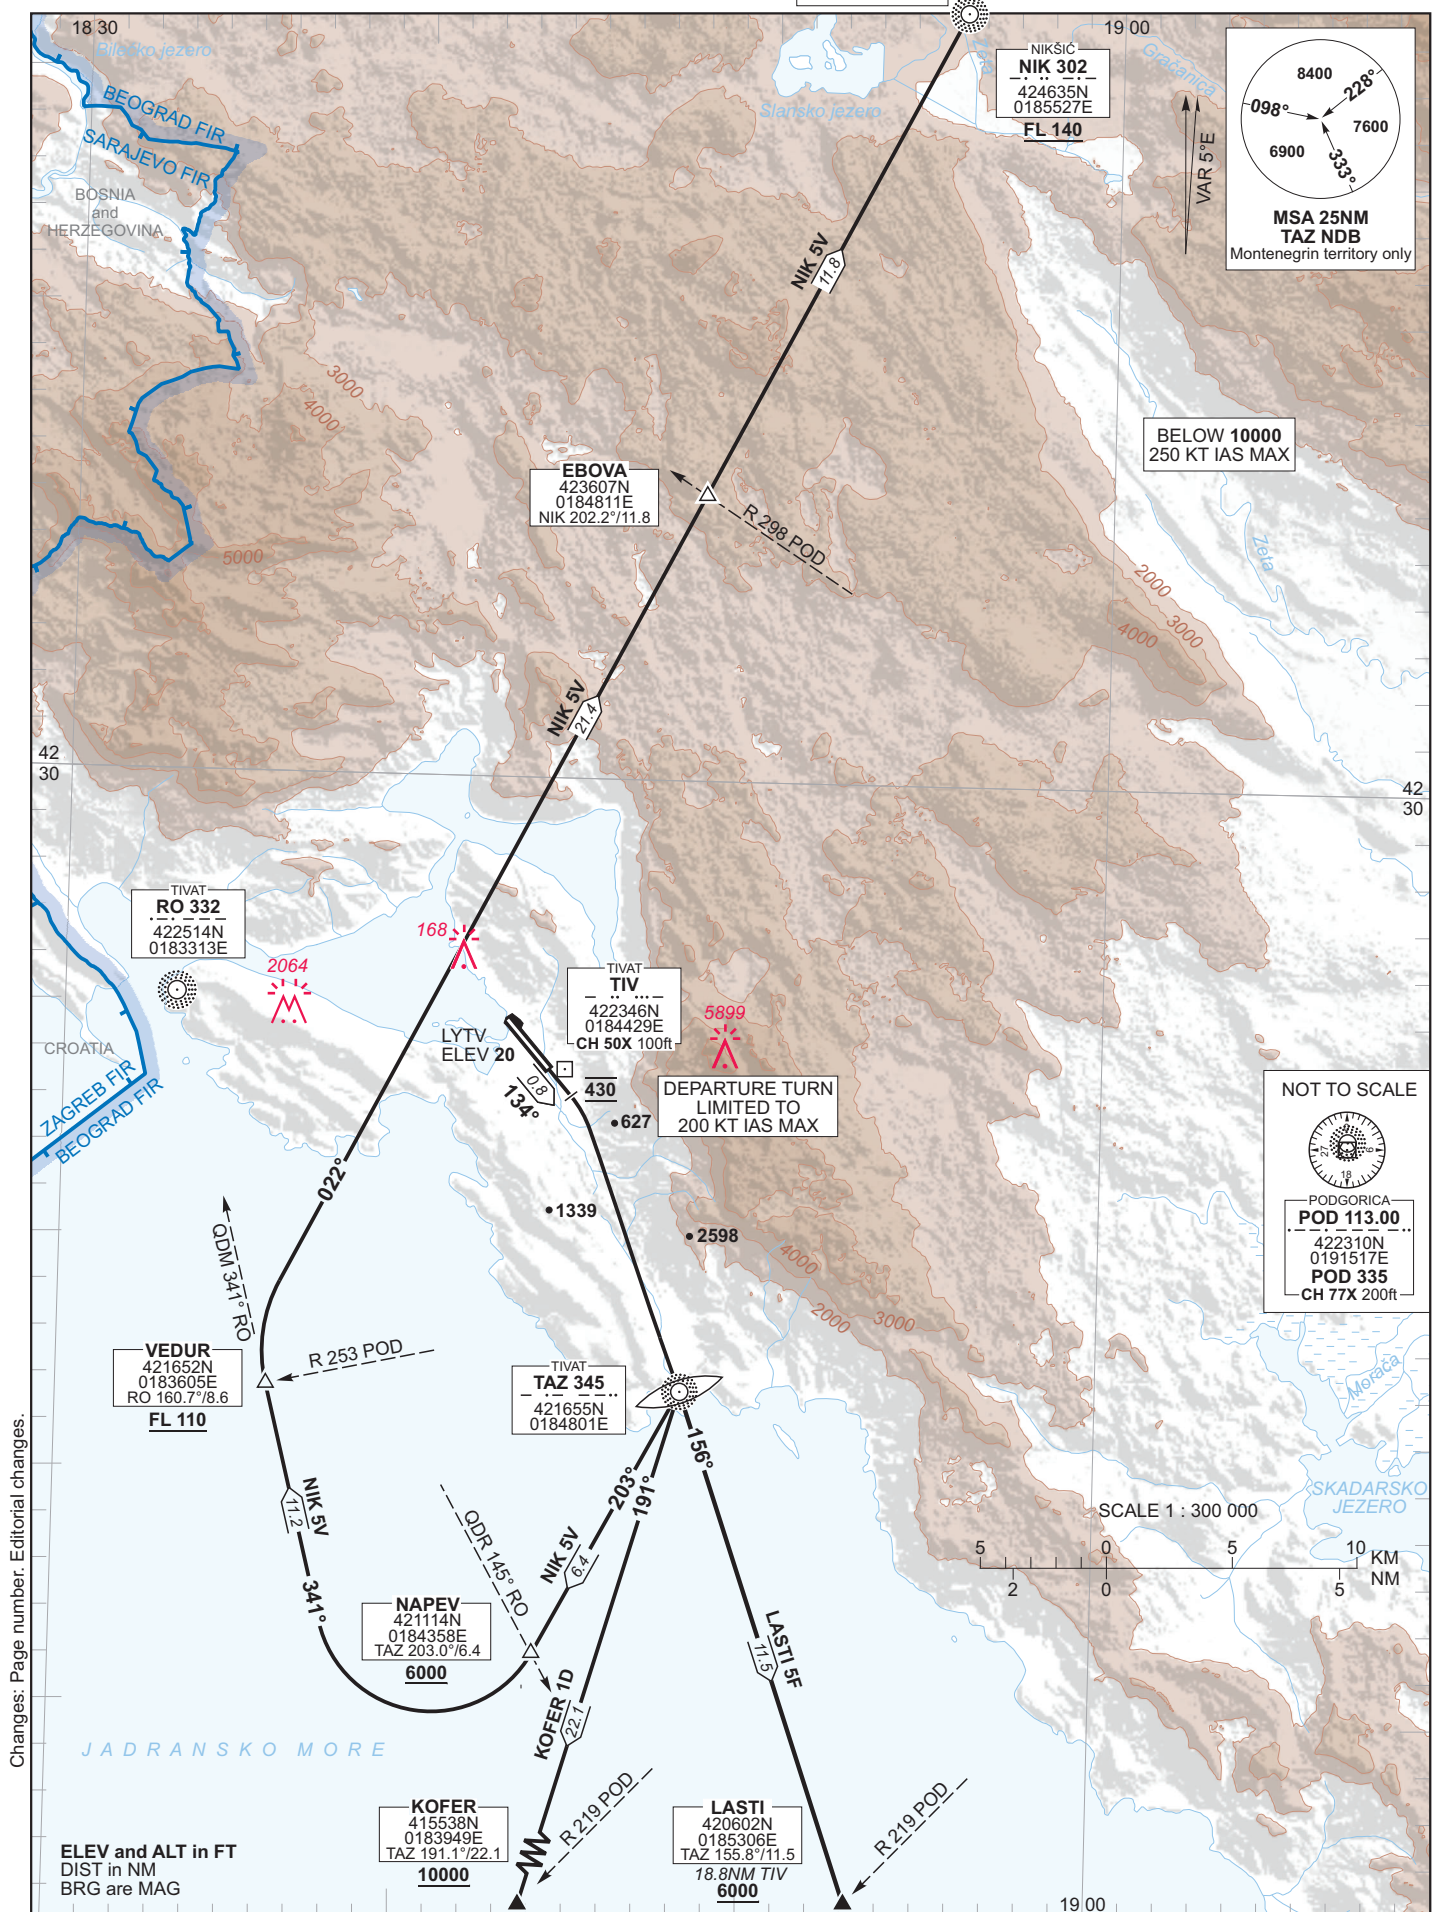

RWY 14 DEPARTURES

Note 1: If unable to comply with requested PDG execute initial take-off visually.

Note 2: Turns are not permitted before the DER.

<i>SID designator</i>	<i>Lateral</i>	<i>Vertical</i>
NIK 5V (NIKŠIĆ FIVE VICTOR)	Climb straight ahead. At 430 FT turn RIGHT (200 KT IAS MAX) direct to TAZ NDB MKR. At TAZ NDB MKR turn RIGHT proceed onto TAZ QDR 203°. At NAPEV turn RIGHT proceed onto RO QDM 341° inbound RO L. At VEDUR turn RIGHT proceed onto NIK QDM 022° climbing to NIK NDB.	This SID requires PDG of 8.4% (510 FT/NM) until 1400 FT then 7.0% (425 FT/NM) until FL 110. NAPEV at 6000 FT or above; VEDUR at FL 110 or above; NIK NDB at FL 140 or above
LASTI 5F (LASTI FIVE FOXTROT)	Climb straight ahead. At 430 FT turn RIGHT (200 KT IAS MAX) direct to TAZ NDB MKR. At TAZ NDB MKR proceed onto TAZ QDR 156° climbing to LASTI.	This SID requires PDG of 8.4% (510 FT/NM) until 1400 FT then 4.7% (286 FT/NM). LASTI at 6000 FT or above.
KOFER 1D (KOFER ONE DELTA)	Climb straight ahead. At 430 FT turn RIGHT (200 KT IAS MAX) direct to TAZ NDB MKR. At TAZ NDB MKR turn RIGHT to intercept and proceed onto TAZ QDR 191° climbing to KOFER.	This SID requires PDG of 8.4 % (510 FT/NM) until 1400 FT then 5.3% (322 FT/NM). KOFER at 10000 FT or above.